



Infrared CO2 Sensor Module (Model: MH-Z19C)

User's Manual

(Version 1.2)

Issue Date. 2021.05.14

Zhengzhou Winsen Electronics Technology Co., Ltd

ISO9001 Certificated Company

Statement

This manual's copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without the written permission, any part of this manual shall not be copied, translated, stored in database or retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers use it better and reduce the faults caused by misuse, please read the manual carefully and operate it correctly in accordance with the instructions. If users disobey the terms or remove, disassemble, change the components inside of the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes &etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the right to improve the products without notice. Please confirm it is the valid version before using this manual. At the same time, users' comments on optimized using way are welcome.


Please keep the manual properly, in order to get help if you have questions during the usage in the future.

Zhengzhou Winsen Electronics Technology CO., LTD.

MH-Z19C NDIR CO2 Module

Profile

MH-Z19C NDIR infrared gas module is a common type, small size sensor, pins type or terminal type, using non-dispersive infrared (NDIR) principle to detect the existence of CO2 in the air, with good selectivity, non-oxygen dependent and long life. Built-in temperature compensation; and it has UART output and PWM output. It is developed by the tight integration of mature infrared absorbing gas detection technology, precision optical circuit design and superior circuit design.

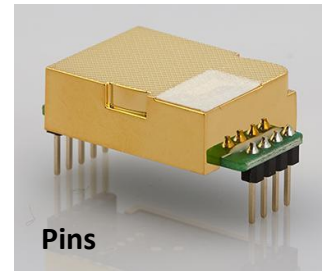

Applications

- *HVAC refrigeration
- *Indoor air quality monitoring
- *Ventilation system
- *Air cleaner device
- *Smart home
- *School

Main Features

- *Chamber is gold plated
- *High sensitivity, low power consumption
- *Good stability
- *Temperature compensation, excellent linear output
- *Multiple output modes: UART, PWM
- *Long lifespan
- *Anti-water vapor interference, anti-poisoning


Main parameters

Model No.	MH-Z19C
Detection Gas	CO2
Working voltage	5.0±0.1V DC
Average current	< 40mA (@5V power supply)
Peak current	125mA (@5V power supply)
Interface level	3.3 V (Compatible with 5V)
Detection Range	400~10000ppm(optional)
Output signal	Serial Port (UART) (TTL level 3.3V)
	PWM
Preheat time	1 min
Response Time	T ₉₀ < 120 s
Working temperature	-10 ~ 50 °C
Working humidity	0 ~ 95% RH (No condensation)
Storage temperature	-20~60 °C
Weight	5 g
Lifespan	> 10 years

Detection range and accuracy

Detection Gas	Formula	Detection Range	Resolution	Accuracy
Carbon Dioxide	CO2	400~2000ppm	1ppm	± (50ppm+5% reading value)
		400~5000ppm		
		400-10000ppm		

Dimensions(Pins type)

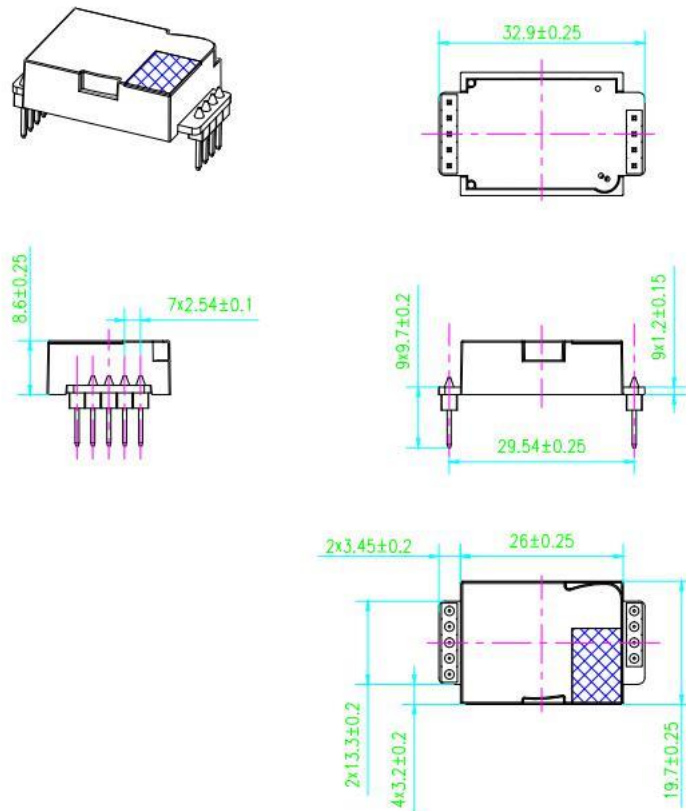

Pins connection type:

Pin	Pin Definition
Vin	Positive pole of power (Vin)
GND	Negative pole of power (GND)
PWM	PWM
Hd	HD(zero point calibration, low level lasting for over 7s is effective)
Rx	UART(RXD)TTL Level data input
Tx	UART(TXD)TTL Level data output


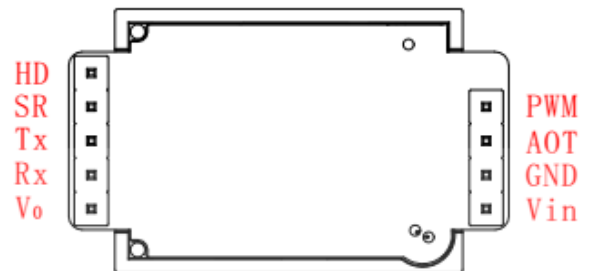


Fig3.from bottom

Dimensions(Terminal type)

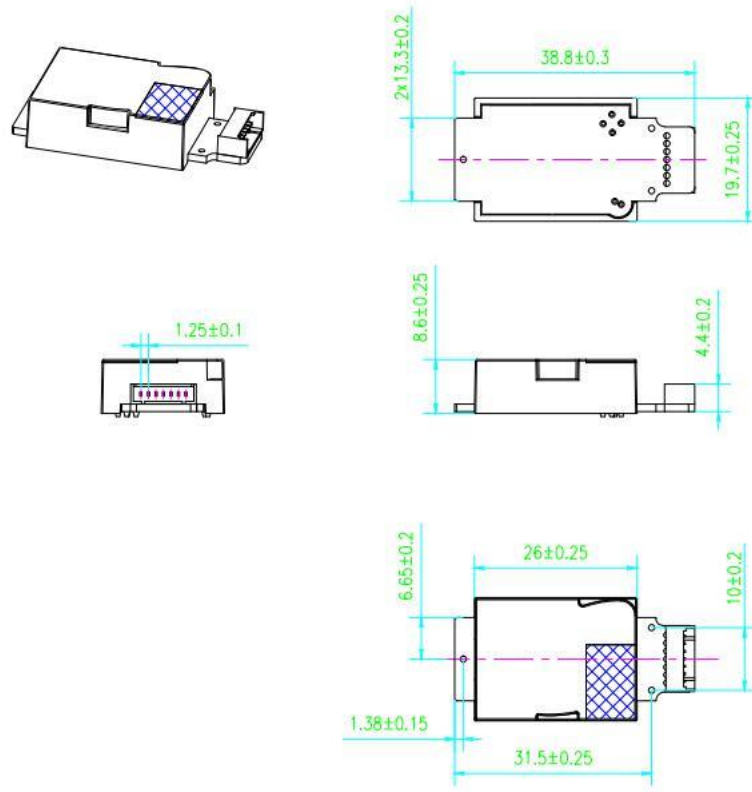

Terminal connection type

Pin	Terminal pin Definition
Pin 4	Vin power in
Pin 3	GND
Pin 2	Reserved
Pin 7	PWM
Pin 1	HD(zero point calibration, low level lasting for over 7s is effective)
Pin 5	UART(RXD)TTL Level data input
Pin 6	UART(TXD)TTL Level data output


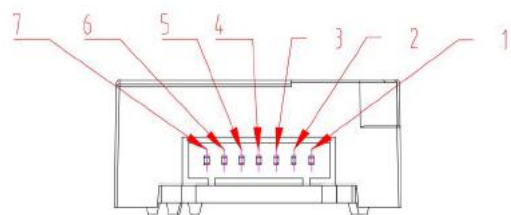


Fig4.Terminal connection version

Output

PWM output	
Take 400~2000ppm for example	
CO2 output range	400~2000ppm
Cycle	1004ms±5%
Cycle start high level output	2ms (theoretical value)
The middle cycle	1000ms±5%

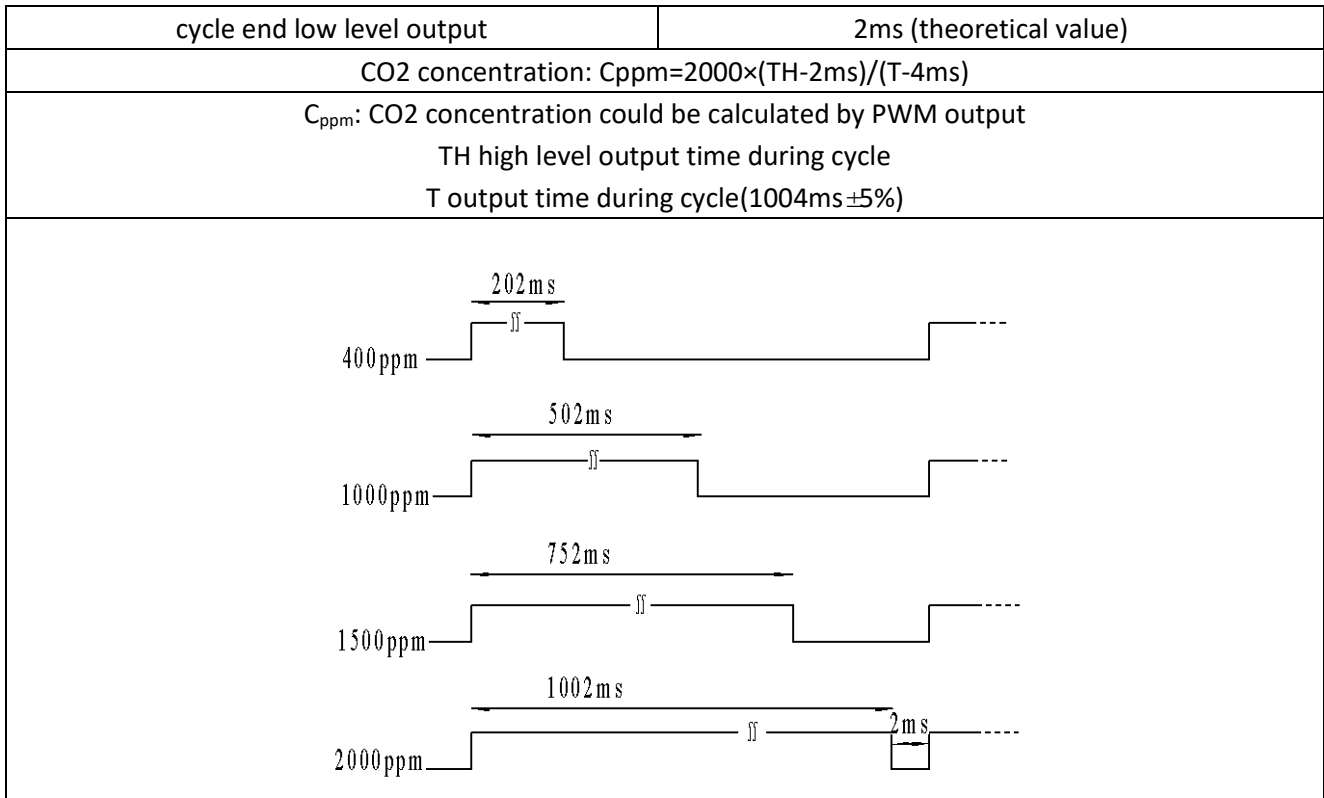

Serial port output (UART)

Hardware connection

Connect module's Vin-GND-RXD-TXD to users' 5V-GND-TXD-RXD.

(Users must use TTL level. If RS232 level, it must be converted.)

Software setting

Set serial port baud rate be 9600, data bit 8 bytes, stop bit 1byte, parity bit null.

Commands	
0x86	Read CO_2 concentration
0x79	Turn on/off self-calibration function

0x86- Read CO_2 concentration								
Sending command								
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte	Reserved	Command	-	-	-	-	-	Checksum
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	0x79
Return value								
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte	Command	Concentration (High 8 Byte)	Concentration (Low 8 Byte)	-	-	-	-	Checksum

0xFF	0x86	HIGH	LOW	-	-	-	-	Checksum
------	------	------	-----	---	---	---	---	----------

For example: CO2 concentration = HIGH * 256 + LOW

How to calculate concentration: convert hexadecimal 01 into decimal 1, hexadecimal F4 into decimal 244, then $1 * 256 + 244 = 500\text{ppm}$

0x79- On/Off Self-calibration for Zero Point

Send command-No return value

Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte	Reserved	Command	-	-	-	-	-	Checksum
0xFF	0x01	0x79	0xA0/0x00	0x00	0x00	0x00	0x00	Checksum

No return value

NOTE: when byte3 is 0xA0, the auto calibration function is on; when byte3 is 0x00, the auto calibration function is turned off. The sensor factory by default is on self-calibration function.

Checksum calculation method

Checksum = (Negative (Byte1+Byte2+Byte3+Byte4+Byte5+Byte6+Byte7))+1

For example:

Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte	Reserved	Command	-	-	-	-	-	Checksum
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	Checksum

Calculating Checksum:

- 1、Add Byte 1 to Byte 7: $0x01 + 0x86 + 0x00 + 0x00 + 0x00 + 0x00 + 0x00 = 0x87$
- 2、Negative: $0xFF - 0x87 = 0x78$
- 3、Then+1: $0x78 + 0x01 = 0x79$

C language

```
char getChecksum(char *packet)
{
    char i, checksum;
    for( i = 1; i < 8; i++)
    {
        checksum += packet[i];
    }
    checksum = 0xff - checksum;
```

Zero Point Calibration

This module has two methods for zero point calibration: hand-operated method and self-calibration. All the zero point is at 400ppm CO2.

Hand-operated method:

Connect module's HD pin to low level(0V), lasting for 7 seconds at least. Before calibrating the zero point, please ensure that the sensor is stable for more than 20 minutes at 400ppm ambient environment.

Self-calibration:

After the module works for some time, it can judge the zero point intelligently and do the zero calibration automatically. The calibration cycle is every 24 hours since the module is power on. The zero point is 400ppm.

This method is suitable for office and home environment, not suitable for agriculture greenhouse, farm, refrigerator, etc.. If the module is used in latter environment, please turn off this function.

Notes

- Please avoid the pressure of its gilded plastic chamber from any direction, during welding, installation, and use.
- When placed in small space, the space should be well ventilated, especially for diffusion window.
- To ensure the normal work, the power supply must be among 4.5V~5.5V DC rang, the power current must be not less than 150mA. Out of this range, it will result in the failure of the sensor. (The concentration output is low, or the sensor cannot work normally.)
- The module should be away from heat, and avoid direct sunlight or other heat radiation.
- The module should be calibrated termly, the suggested period is no longer than 6 months.
- Do not use the sensor in the high dusty environment for long time.
- During the zero-point calibration procedure by manual or sending command, the sensor must work in stable gas environment (400ppm) for over 30 minutes.
- Forbid using wave soldering for the sensor.
- When soldering with soldering iron, set the temperature to be $(350 \pm 5) ^\circ \text{C}$, and soldering time must be within 3 seconds.

Zhengzhou Winsen Electronics Technology Co., Ltd

Add: No.299, Jinsuo Road, National Hi-Tech Zone,
Zhengzhou 450001 China

Tel: +86-371-67169097/67169670

Fax: +86-371-60932988

E-mail: sales@winsensor.com

Website: www.winsen-sensor.com